


BALANCER SERVICE CALIBRATION

CALIBRATION PLATE

COUNTER WEIGHT




BLUE HOLE

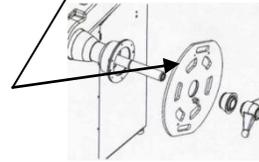


NOTE: WHEN THIS PLATE IS MOUNTED ONTO THE BALANCER THE BLUE HOLE SHOULD BE ON THE LEFT SIDE

1. MOUNT THE BALANCING PLATE ONTO THE BALANCER.
2. PRESS THE **“DOWN ARROW BUTTON”** ONCE
3. PRESS THE **“RIM BUTTON”** ONCE
4. PRESS THE **“UP ARROW BUTTON”** UNTIL THE DISPLAY WINDOW SHOWS 98
5. PRESS THE **“ENTER BUTTON”** ONCE
NOTE: THE DISPLAY WINDOWS WILL SHOW “DI AND A NUMBER BETWEEN 20 AND 35”
6. ROTATE THE INTERNAL DISTANCE ARM TOWARD YOUR STOMACH UNTIL THE RIGHT DISPLAY WINDOW SHOWS 133
7. WHILE HOLDING THE ARM IN THIS POSITION PRESS AND HOLD THE **“ENTER BUTTON”**
NOTE: THE DISPLAY WINDOWS WILL SHOW “D AND F”
8. RETURN THE INTERNAL DISTANCE ARM TO IT’S REST POSITION
9. PULL THE INTERNAL DISTANCE ARM OUT AND PLACE THE POINTER INTO THE BLUE HOLE.

BLUE HOLE

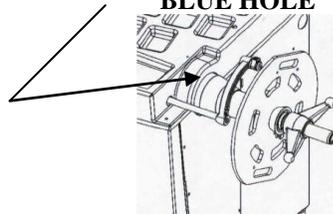

10. WHILE HOLDING THE ARM IN THIS POSITION PRESS THE **“F BUTTON”** ONCE
NOTE: THE DISPLAY WINDOWS WILL SHOW “CAL AND GO”
11. CLOSE THE HOOD AND LET THE PLATE SPIN

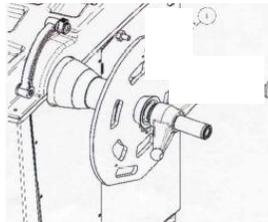


12. WHEN THE PLATE STOPS OPEN THE HOOD

CONTINUED ON NEXT PAGE

13. PLACE THE COUNTER WEIGHT INTO HOLE #1

NOTE: THE COUNTER WEIGHT SHOULD BE POINTING LEFT

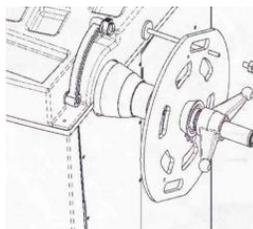

14. ROTATE THE COUNTER WEIGHT TO THE 6 O'CLOCK POSITION

15. WHILE HOLDING THE COUNTER WEIGHT IN THIS POSITION PRESS THE "F BUTTON" ONCE.


16. CLOSE THE HOOD AND LET THE PLATE SPIN

17. WHEN THE PLATE STOPS OPEN THE HOOD

18. REMOVE THE COUNTER WEIGHT

19. PLACE THE COUNTER WEIGHT INTO HOLE #1

NOTE: THE COUNTER WEIGHT SHOULD BE POINTING RIGHT

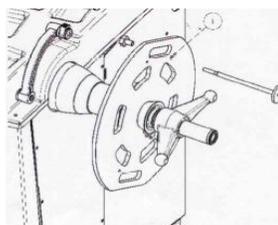

20. CLOSE THE HOOD AND LET THE PLATE SPIN

21. WHEN THE PLATE STOPS OPEN THE HOOD

22. PRESS THE "F BUTTON" TWICE TO EXIT THE SERVICE CALIBRATION PROGRAM

THE SERVICE CALIBRATION IS NOW COMPLETE